

System Security

Usage

Table on Contents

Introduction	1
Logging On	1
Logging Off	1
Changing User Password	2
Security Displays	2

Introduction

This section describes general security usage.

Logging On

Press the **Keys** icon to bring up the login screen. Enter your user name and password and then click the **Login** button. This will log you on. Additional system icons will activate depending on your login credentials.

A floating tool bar will also display. This tool bar is configured by Alpine personnel. The tool bar includes several functions that provides one click access to various functions. The tool bar can be resized and moved anywhere on the screen. The location is based on your user ID. The location of the tool bar will be save when you exit the program.

You can also access the log in screen by pressing the Shift F10 combination key at any time while in any screen.

Logging Off

Press the lock to log off the system and keep the RedNMX program running.

Changing User Password

To change your user password follow these steps:

1. Press the lock button on the top.
2. Enter your username
3. Click the **Change Password** button
4. Enter you old password.
5. Enter the new password.
6. Confirm the new password.
7. Press the Change button.

You have successfully changed your password.

Security Displays

On the lower application panel exists the security display.

Title	Description
User Name	Displays the current logged user name
Session Start	Start of the session.
Time Out (if applicable)	Displays the amount of time until the system logs off. Only displayed if the time out is set.